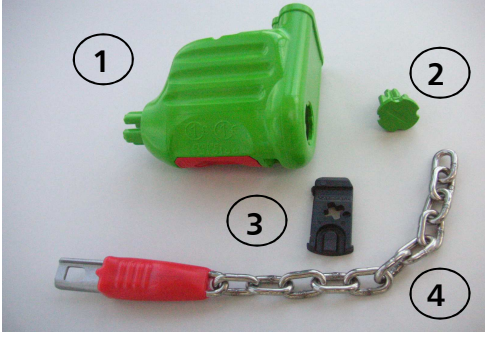
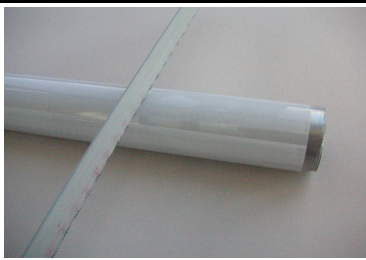

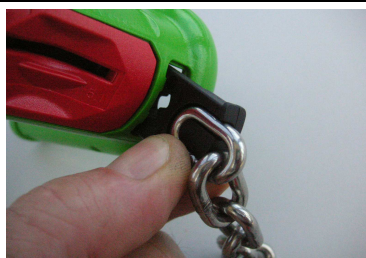




		tools
		<ul style="list-style-type: none"> ① euroloc ② fixing piece ③ chain fixing ④ chain
		description
1.		Shorten handle bar (saw) so that the distance between wire and handle bar is 50 mm.
2.		Put the last link in the chain fixing key.
3.		Put the chain with the key in the euroloc case.
4.		Put the handle bar with euroloc and the left hand plastic cap onto the shopping trolley.
5.	 <p style="color: red; font-weight: bold;">Attention: D11mm Designation must be upright.</p>	Screw in the left side cap retaining screw. Put fixing piece into the euroloc The right plastic cap and screw remain unused.